



# BINDING CHECK

## AFTER THE SEASON

- |   |  |
|---|--|
| <input type="checkbox"/> <b>BINDING</b><br>Function for getting in and out, as well as switching between walk- and Ski mode | <input type="checkbox"/> <b>WEAR</b><br>Check the binding for wear and tear; replace heavily used parts if necessary                                       |
| <input type="checkbox"/> <b>CLEANING</b><br>Remove any foreign objects; clean heavy soiling with a damp cloth               | <input type="checkbox"/> <b>WALK MODES AND STOPPERS</b><br>Check that the step aid locks into place; check that the stopper is working properly            |
| <input type="checkbox"/> <b>MOVING PARTS</b><br>Lubricate sliding surfaces and moving components with cold-resistant grease | <input type="checkbox"/> <b>STORAGE</b><br>Store skis in a dry place. Set the bindings to Ski-mode to relieve pressure on the springs                      |
| <input type="checkbox"/> <b>SCREWS</b><br>Check that the mounting screws are secure and tighten them if necessary           | <input type="checkbox"/> <b>SERVICE</b><br>Have your bindings checked by a specialist retailer before the new season and have them readjusted if necessary |